




Accelerator NL-63-100

Product description

N,N-Dimethylaniline

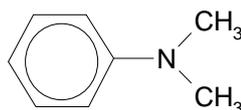

CAS No. : 121-69-7
EINECS/ELINCS No. : 204-493-5
TSCA status : listed on inventory

Specifications

Appearance : clear light yellow to light brown liquid
Assay : 98.5% min.

Characteristics

Density, 20°C : 0.960 g/cm³
Viscosity, 20°C : 1 mPa.s
Boiling point : 194°C
Melting point : 2°C

Storage

Accelerator NL-63-100 is stable at ambient temperatures.

When stored under these recommended storage conditions, Accelerator NL-63-100 will remain within the AkzoNobel specifications for a period of at least 6 months after delivery.

Major decomposition products

In case of fire toxic fumes of N-oxides may be formed.

Packaging and transport

The standard packaging is a 25 kg and 200 kg drum.

Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your AkzoNobel representative.

Accelerator NL-63-100 is classified in Division 6.1; UN 2253.

Safety and handling

Keep containers tightly closed. Store and handle Accelerator NL-63-100 in a dry well-ventilated area at ambient temperatures. Do not mix with organic peroxides.

Please refer to the Material Safety Data Sheet (MSDS) for further information on the safe storage, use and handling of Accelerator NL-63-100. This information should be thoroughly reviewed prior to acceptance of this product.
The MSDS is available at www.akzonobel.com/polymer.

Applications

The curing of unsaturated polyester resins at ambient temperatures can in general not be performed by an organic peroxide alone. The radical formation, which is necessary to start the polymerisation reaction, is at ambient temperatures with most generally applied organic peroxides too slow.

To speed up the radical formation in a controllable way, organic peroxides must therefore be used in combination with a so-called accelerator. For diacyl peroxides like all Perkadox[®] types and *Perkadox 16*, aromatic tertiary amines have to be used as accelerator.

For this purpose, the following amines are available:

Accelerator NL-63-types	N,N-Dimethylaniline	(DMA)
Accelerator NL-64-types	N,N-Diethylaniline	(DEA)
Accelerator NL-65-types	N,N-Dimethylparatoluidine	(DMpT)

From each amine type the following formulations are available:

suffix	formulation
-100	technically pure product
-10P	10% formulation in aliphatic ester

Each amine accelerator has a different and specific influence on the decomposition of the diacyl peroxide. It is therefore possible by the proper choice of amine type and dosage level to adjust a wide variety of gel times and speed of cure. In this way a cure system can be developed for unsaturated polyester resins, which is extremely fast resulting in very short demolding times of the cured product.

The cure system dibenzoyl peroxide/amine accelerator can further be characterised as being:

- not sensitive for moisture
- practically not sensitive to pigments and fillers
- applicable at low temperatures, even at 0°C a reasonable speed of cure can be achieved.

Possible disadvantages may be:

- a limited pot life of the amine accelerator in the UP resin
- yellow to brown colour of the cured product
- poor UV light stability of the cured product
- a relatively high residual styrene content in the mouldings after a postcure at elevated temperatures, especially at high amine accelerator dosages.

A special application of the amine accelerators is their use as promoter in a ketone peroxide/cobalt accelerator cure system. For this application mainly Accelerator NL-63-100 or its lower concentrated version is used.

The use of Accelerator NL-63-100 as promoter for a ketone peroxide/cobalt accelerator cure system will be demonstrated by the following gel time experiments with the ketone peroxides Butanox[®] M-60, *Butanox* LPT and Trigonox[®] 44B in combination with Accelerator NL-49P (1% cobalt) or Accelerator NL-51P (6% cobalt).

Gel time at 20°C

standard orthophthalic resin

2 phr <i>Butanox</i> M-60 + 1 phr Acc. NL-49P	7 min.
2 phr <i>Butanox</i> M-60 + 1 phr Acc. NL-49P + 0.05 phr Acc. NL-63-100	4 min.
2 phr <i>Butanox</i> M-60 + 1 phr Acc. NL-49P + 0.10 phr Acc. NL-63-100	2 min.
2 phr <i>Trigonox</i> 44B + 1 phr Acc. NL-49P	8 min.
2 phr <i>Trigonox</i> 44B + 1 phr Acc. NL-49P + 0.05 phr Acc. NL-63-100	5 min.
2 phr <i>Trigonox</i> 44B + 1 phr Acc. NL-49P + 0.10 phr Acc. NL-63-100	3 min.

bisphenol A/fumarate resin

2 phr <i>Butanox</i> LPT + 0.5 phr Acc. NL-51P	145 min.
2 phr <i>Butanox</i> LPT + 0.5 phr Acc. NL-51P + 0.05 phr Acc. NL-63-100	65 min.
2 phr <i>Butanox</i> LPT + 0.5 phr Acc. NL-51P + 0.10 phr Acc. NL-63-100	34 min.

bisphenol A/vinylester resin

2 phr <i>Butanox</i> LPT + 0.5 phr Acc. NL-51P	32 min.
2 phr <i>Butanox</i> LPT + 0.5 phr Acc. NL-51P + 0.05 phr Acc. NL-63-100	22 min.
2 phr <i>Butanox</i> LPT + 0.5 phr Acc. NL-51P + 0.10 phr Acc. NL-63-100	16 min.

Pot life at 20°C

Pot lives were determined in an UP resin at 20°C.

0.1 phr Accelerator NL-63-100	25 days
0.2 phr Accelerator NL-63-100	13 days

Perkadox, *Butanox* and *Trigonox* are registered trademarks of Akzo Nobel Chemicals B.V. or affiliates in one or more territories.

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. AkzoNobel Polymer Chemicals, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nothing contained herein shall be construed as granting or extending any license under any patent. Buyer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued bulletins on the subject matter covered. The user may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. You may not copy this document to a website.

Akzo Nobel Polymer Chemicals B.V.
Amersfoort, The Netherlands
Tel. +31 33 467 6767
Fax +31 33 467 6151

polymerchemicals.nl@akzonobel.com

Akzo Nobel Polymer Chemicals LLC
Chicago, U.S.A.
Tel. +1 312 544 7000
1 800 828 7929 (Toll free US only)
Fax + 1 312 544 7188
polymerchemicals.na@akzonobel.com

Akzo Nobel (Asia) Co., Ltd.
Shanghai, PR China
Tel. +86 21 6279 3399
Fax +86 21 6247 1129

polymerchemicals.ap@akzonobel.com

www.akzonobel.com/polymer